

Specification:
Setting up a lighting management system

Setting up:

In accordance with the latest functional description: check the existing cabling for compliance with installation guidelines

Install winDIM@net software on the server

Address and configuring [AZ] DALI users

Establish communication between proDIM controller and server

Assign addresses logically according to the room layout

The system should then be started up by a system partner certified by TRIDONIC.ATCO