

luxCONTROL

**connecDIM Architect**

**connecDIM Lite**

Nice to know

**TRIDONIC**



This document informs about known limitations of the two connecDIM Apps - connecDIM Architect and connecDIM Lite.

Devices with limited support	Valid for App	
	Architect	Lite
Because the ready2mains Gateway and the basicDIM DGC are special devices they are displayed as sensors in the apps.	x	x
Because the basicDIM DGC is a special device type, the connecDIM Architect does not support the configuration of scenes for this device. _ If you need to configure a basicDIM DGC, use the Tridonic software masterCONFIGURATOR!	x	
Because the DALI XC is a special device type the connecDIM Architect does not support the configuration for this device. _ If you need to configure a DALI XC, use the Tridonic software masterCONFIGURATOR!	x	
Scenes with colour information can not be programmed for tunable white devices. _ If you need to program a scene for a tunable white device with a specific colour, use the Tridonic software masterCONFIGURATOR!	x	
If a sensor, tunable white or emergency device is selected as trigger or target for a logical area, control fields for standard driver will be displayed.	x	
<b>Additional information</b>		
With the connecDIMArchitect, scenes can only be programmed for DALI circuits with <12 devices. _ If you need circuits with >12 devices, use the Tridonic software masterCONFIGURATOR to program scenes!	x	
Logical areas created with the connecDIM Architect do not work if the network router is disconnected (even if a logical area is only created for one gateway). _ To avoid this behaviour, program the logical area in the connecDIM cloud or leave the connecDIM Gateway connected with the network and router.	x	
If a logical area is created and a group is selected as target or trigger, the devices inside this group will not be shown in the app. Still, it is possible to localize the devices assigned to this group with the control fields.	x	
The gateway may disappear sometimes. Depending on the network traffic, it may happen that the connecDIM Gateway disappears from the apps. _ If this happens, refresh the view. _ If this does not help, check the network traffic.	x	x

<p>In the connecDIM Architect only GW MAC Address and DALI address information are displayed. If user given names, via the cloud, are used, the user given names will not be displayed in the connecDIMArchitect. In the connecDIM Lite the user given name is visible.</p>	<p>x</p>	
<p>User Management:                  _ not possible to log in via connecDIM Lite app</p>		<p>x</p>

PHASED OUT